

Illuminations 1924 Stone/Frosted Sleeve – LED Only

Installation Instructions (Stone 95000957, Frosted 95000958)

Packing List

- (3) Cylinders (Stone or Frosted Plastic) of differing heights (see the table below for details)
- (5) Candle Sleeves of differing heights (see the table below for details)

Cylinder Layout

The cylinders (stone or frosted) and candle sleeves come in various heights. To help determine placement, use the table below to identify and place each cylinder and candle sleeve.


NOTE: The stone cylinders vary slightly in height and are close to the dimensions below (the diameter is slightly larger). Use the dimensions below as a guideline to insure correct cylinder placement.

NOTE: The candle sleeves are stamped with a number for easy identification.

HINT: Start with Candle B, the tallest candle in the center.

Candle	A	B	C
Cylinder Dimensions	9" Tall 3.25" Dia.	12" Tall 3.25" Dia.	6" Tall 3.25" Dia.
Frosted Cylinder Part #	150-08120	150-08121	150-08118
Stone Cylinder Part #	150-08110	150-08109	150-08112
Candle Sleeve ID	1 and 3 placed together	1 and 7 placed together	5

Figure 1

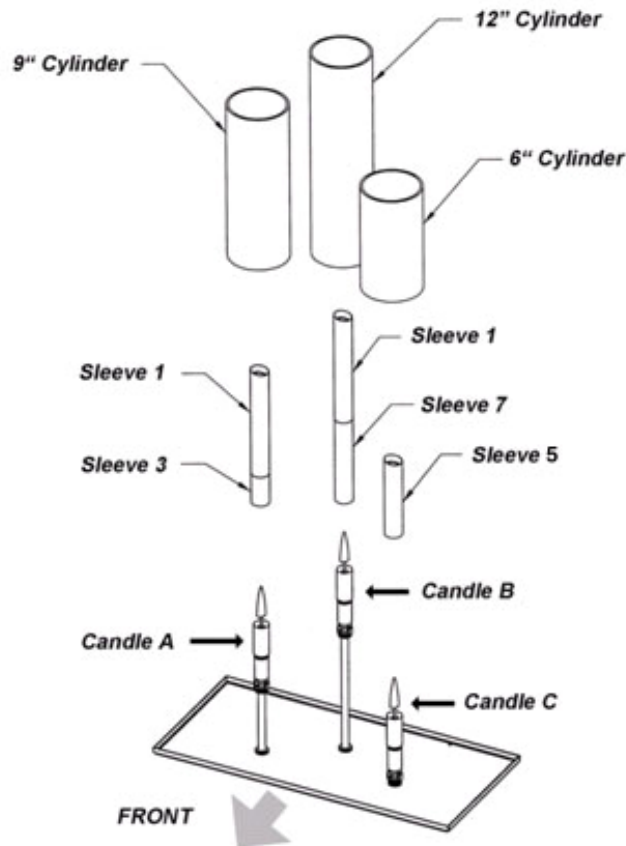

Installation

- 1 Follow the installation instructions included with the 1924 Illuminations Electric Fireplace through installing the bulbs included with the fireplace.
 - Take great care when handling the delicate bulbs and heed the warnings.
 - Check to be sure none of the wires are pinched under the edges of the tray.
 - Turn the fireplace on and make sure all bulbs are working before proceeding.
 - Be sure you have removed the bag of crushed glass media shipped inside the fireplace under the candle tray.
- 2 Install the white plastic candle sleeves over the three candles. See Figure 1 and the table above to identify the components. Figure 2 shows the process.

Figure 2

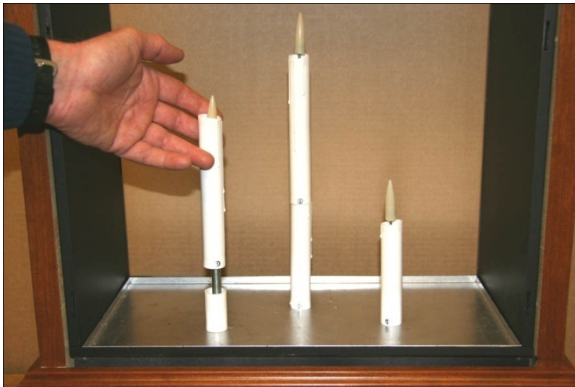


Figure 3



3. Install the cylinders over the candles. Start with the tallest, Candle B. Tilt the cylinder as required, and take care as you slide the cylinder over the candle that you don't damage the bulb. Center each cylinder around the candle.
4. Light the unit again to be sure all the bulbs are operating properly. Make any corrections.
5. Spread the reflective glass media around the candles to conceal the metal tray, filling the entire surface including the area behind the candles up to the lip of tray. See Figure 3.