




## 3615 HO GSR2 LP (Propane) Conversion Check List

When converting to LP (propane), make sure the following steps have been followed (see manual for full details):

- ✓ **Make sure to Order the Stepper Motor Kit (94400999)**  
This fireplace is shipped as a GSR unit with remote built in. When converting to propane, you will need to use the propane stepper motor kit (sku 94400999 – package of 4).



- ✓ **Remove and Discard the NG Manifold Cover and Orifice Gasket – Install the LP Manifold Cover**  
Remove and discard the NG (stock) manifold cover and orifice gasket (1/4" nutdriver). Install the included LP manifold cover (see illustration below). See manual for details.

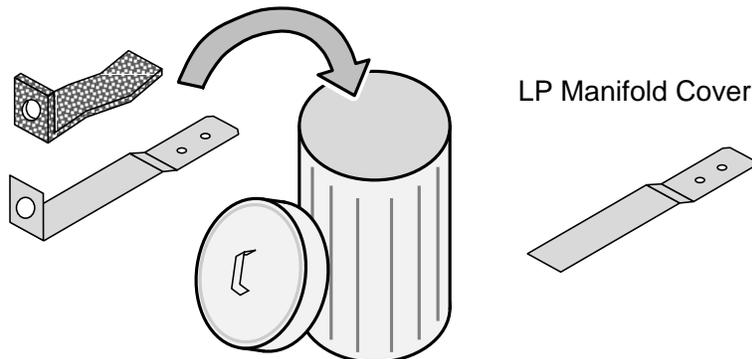

- ✓ **Install the LP Burner Orifice**  
Install the included #52 (DMS) orifice when using LP – see manual for details.
- ✓ **Install the LP Pilot Orifice**  
Install the included LP pilot orifice (marked .014LP) – see manual for details.